



使用本产品前请仔细阅读说明书，妥善保管以备参考。
Please read the instructions carefully before
using this product and keep it well for referen.

产品类型	机械键盘
产品型号	KG5104
线缆长度	Φ4.2 1800mm
传输介面	USB
相容系统	Windows XP /Vista/ Win 7 / Win 8/Win 10 Mac OS
产品尺寸	444 x 151.1 x 44.6mm (L*W*H)
产品重量	980 ± 20g

- Cherry M机械式开关具有5000万次的点击寿命,内有镀金的黄金接点和耐压金属弹簧
- 提供最精确、最灵敏的触觉反馈
- 6键/全键,输出无冲突
- NKRO防鬼键设计,让所有按键能够正确输出,即使同时按下多个键都不受到任何影响 (hardware mode)
- 可调式的背光效果,背光亮度10种背光模式,4档可调亮度
- 免驱即时宏录制
即插即用,无需安装

雷神键盘*1、说明书*1、保修卡*1、合格证*1

Windows XP / Vista / Win 7 / Win 8 / Win 10 / Mac OS

即插即用:只需将键盘连接到可用的计算机 USB 端口

激活方式	功能说明
+	Game mode(“G”指示灯点亮) / PC mode切换(“G”指示灯熄灭)
+	静音
+	音量减小
+	音量增加
+	播放/暂停
+	上一曲

2

	+		下一曲
	+		切换到6-Key Rollover (默认 6-Key)
	+		切换到N-Key Rollover
	+		即时宏录制

步骤1: 按下FN+F6开启Window快捷键,此时“G”指示灯点亮。

步骤2: 按下FN+Home,“G”指示灯将会快闪(每秒闪烁二次)。

步骤3: 指定要保存宏的按键(此时该按键背光闪烁),“G”指示灯将会慢闪(每秒闪烁一次,20秒没有输入则终止)。

步骤4: 选择FN以外的按键,录入宏列表中的内容(20秒没有输入则终止)。

步骤5: 按下FN+Home完成即时宏录制,“G”指示灯将停止闪烁(常亮)。

步骤3时如发现有按键背光亮,代表此按键有被设定为宏按键。

要清除录制的Macro Key重复录制程序,按下要取消已保存宏的按键;步骤4时不输入内容,跳到步骤5,即完成单一按键恢复预设值动作。

单一Macro Key长度可设4个Key,Fr不能设为Macro Key

3

	+		背光亮度增加
	+		背光亮度减小, 关闭、50%、75%、100%共四档, 调至极限档位时所有指示灯闪烁3次指示
	+		切换背光模式: 长亮, 呼吸, 波浪, 旋转, 波纹触发(灭灯), 单一触发, 激光束触发, 雨滴, 波纹触发(亮灯), 矩形网格, 调至极限时所有指示灯闪烁3次指示
	+		
	+		Game mod锁定Win功能键, 重复解锁
	+		按住3秒(三个指示灯闪烁三次), 恢复当前设定
	+		恢复出厂设置: 拔下USB, 先按下B+L不放; 再插入USB, 直到3个指示灯闪烁3次完毕, 按键背光亮再放开

《废弃电器电子产品回收处理管理条例》

雷神倡导环保和低碳的消费体验，建议拥有该产品的用户在不需要此产品时，应遵守国家废弃电器电子产品回收处理相关法律法规，将其交给当地具有国家认可的回收处理资质的厂商进行回收处理，降低资源浪费，保护地球自然环境。

4

有害物质或元素的名称及含量

部件名称	有害物质或元素					
	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr(VI))	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
印刷电路板组件	○	○	○	○	○	○
外壳及附件	○	○	○	○	○	○

本表格依据SJ/T 11364的规定编制



该电子电气产品含有某些有害物质,在环保使用期限内可以放心使用,超过环保使用期限之后则应该进入回收循环系统

Genre	Mechanical Keyboard
Model	KG5104
Cable Length	ø4.2 1800mm
Interface	USB
Operational system	Windows XP /Vista/ Win 7 / Win 8/Win 10/ Mac OS
Dimensions (L*W*H)	444 x 151.1 x 44.6mm
Weight	980 ± 20g

- Cherry MX switches rated at 50-million keystrokes for the most durable, precise, and responsive tactile feedback.
- 6-NKRO(Default)/Full-NKRO switching
100% anti-ghosting support across all zones(N-Key Rollover)
- Lighting effect adjustment , brightness
contain 10 Lighting effect adjustment, 4 stage brightness
- No drive instant macro recording
Plug and play, no installation required

Keyboard*1 Quick Start Guide*1 Warranty card*1,
Qualified Certificate*1

PC with available USB port
Windows XP / Vista / Win 7 / Win 8 / Win 10 / Mac OS

Plug and play, Simply connect the keyboard to an available USB port

Hotkey	Description
+	Game mode (“G” Indicator light on)/PC mode (“G” Indicator light off)
+	Mute
+	Volume Down
+	Volume Up
+	Play/Pause
+	Previous Track

7

	+		Next Track
	+		Switch to 6-Key Rollover (default)
	+		Switch to N-Key Rollover
	+		Instant Macro Recording

Step 1: Press FN+F6, Turn on the Windows key lock, indicator light is on.

Step 2: Press FN+Home, "G" indicator will flashing (blinking twice per second).

Step 3: Assign a key you want to save macro (at which the key backlight flashes), "G" indicator light will flash slowly (once every second, terminate if no input is entered in 20 seconds).

Step 4: Select a key other than Fn and Type key which macro list (no input in 20 seconds will terminate).

Step 5: Press FN+Home, finish instant macro record, indicator will stop flashing (always on).

Step 3 if the button is lit with backlight, Represents the key has been set as a macro key

8

To clear recorded Macro Key: repeat the recorded program by pressing the button to cancel the saved Macro. In step 4, do not enter the content, skip to step 5, that is, complete the action of restoring the preset value of a single key

A single Macro Key length can be set to 42 keys. Function cannot be set to Macro Key.

	+		Adjust brightness levels. (100%, 75%, 50%, OFF)
	+		To limit Game mode/Caps/Num LED will be fast blinking for 3sec
	+		Switch the backlight mode: Lightened/Breathing/Wave/Spin/T rigger Ripple 1/Trigger
	+		Single/Trigger Laser Beam/Rain Drop/Trigger Ripple 2/Rectangle Grid
	+		To limit Game mode/Caps/Num LED will be fast blinking for 3sec
	+		Disable/Enable the Win key Game mode: win key disable (default) PC mode: win key always enable

9

 +  Profile restore: Game mode/Caps/Num LED will be fast blinking for 3sec

 +  Factory data reset
Unplug USB and press B+L first. Insert USB again, until the 3 indicator lights flash 3 times, the button backlight is lit and then release

 This product must not be disposed of with your other household waste or treat them in compliance with the local regulations or contact your local city office, your household waste disposal service or the shop where you purchased the product

10